

Yamaha 02R96 Upgrade Guide (for Windows)

This document explains how to upgrade the 02R96 system software using a Windows computer connected via USB.

Precautions (please be sure to read these precautions)

- The user assumes full responsibility for the upgrade.
- Upgrading the 02R96 erases all user memories and resets all settings to their default values. Back up important data before upgrading.
- If you fail to follow these instructions properly, or turn off the 02R96 or disconnect the USB cable while the upgrade is in progress, the 02R96 may be damaged.
- This software is for upgrading the 02R96 system software from a Windows computer via USB. MIDI drivers other than the Yamaha USB-MIDI driver cannot be used.
- If the upgrade fails while the new system software is being transferred to the 02R96 due to the power being turned off, the USB cable disconnected, etc., when the 02R96 is turned back on again it will startup in download mode, not normal mode. In this case you should reconnect the cable and perform the upgrade again.
- If the 02R96 does not work properly after upgrading, and you've tried upgrading several times, please contact your Yamaha dealer.
- This software and its documentation is copyright Yamaha Corporation.
- Reproducing or modifying all or part of this software or its documentation without permission is strictly prohibited.
- The screen shots in this guide are for use with this upgrade procedure only and may be different to the actual screen shots.
- Windows is a registered trademark of Microsoft Corporation.
- All other trademarks are the property of their respective holders and are hereby acknowledged.

System Requirements

- PC with 166 MHz Intel Pentium or Celeron family processor
- Windows 98, 98SE, Me, 2000, XP Home Edition, or XP Professional
- Hard disk with at least 5 MB free space
- At least 32 MB memory
- 640 x 480 display, 16-bit High Color or better
- USB cable

Checking the System Version

To check the version number of your 02R96's system software, use the DISPLAY ACCESS [UTILITY] button to locate the Battery Check page shown below. The version number is displayed at the bottom.



Included Files

The following files are included in this folder:

- 02R96UpgradeE.pdf (this guide)
- 02r96VerUp.exe (upgrade program)
- 02r96.bin (upgrade data)

Upgrading the System Software

Note: Before starting the upgrade program, quit all other programs. While the upgrade is in progress, do not start any other programs or switch between windows.

Note: If your computer enters Sleep or Energy Save mode, data transfer to the 02R96 may stop, so disable these functions to prevent this from happening.

Note: You must install the Yamaha USB-MIDI driver before upgrading. See the documentation included with the 02R96 for more information.

1 Connect the 02R96 to your PC by using a USB cable.

Note: In the Windows Control Panel, double-click “MIDI-USB Driver,” and make sure that the “Thru ON/OFF” option is off.


Note: Do not connect any USB devices other than the 02R96, USB mouse or USB keyboard. Connect the 02R96 directly to a USB port on your PC, not via a USB hub.

2 While holding down the 02R96’s MACHINE CONTROL [REC] button, turn on the 02R96, and hold down the button until “FLASH UPDATE” appears on the display.

3 Double-click “02r96VerUp.exe” to start the upgrade program.

Note: If an error message appears, check the USB cable and make sure the USB-MIDI driver is installed correctly, then start the program again. For more information on error messages, see page 5.

4 Make sure the Output Port is set to “YAMAHA USB OUT x-1” and the Input Port is set to “YAMAHA USB IN x-1,” as shown below.

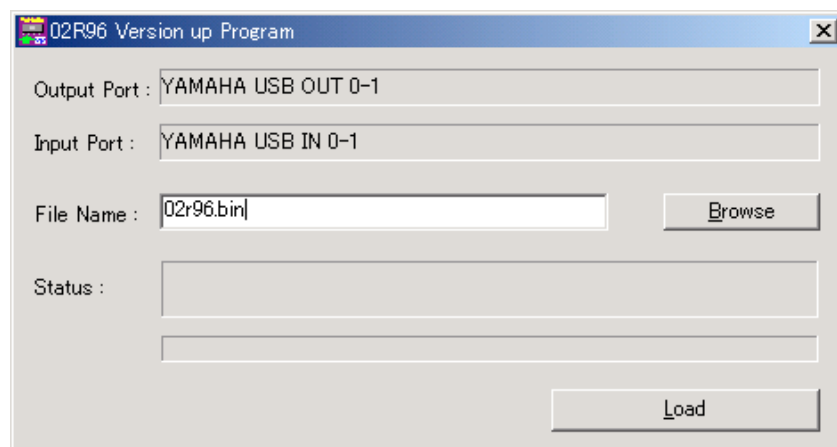

5 Click Browse and select the “02r96.bin” file in this folder.

6 To start the upgrade, click Load.

Note: The upgrade takes about 3–4 minutes. While the upgrade is in progress, do not turn off the 02R96 or disconnect the USB cable. If for some reason the upgrade fails (e.g., the power cord is disconnected), the 02R96 may not work properly. If the 02R96 does not respond when you try upgrading it again, contact your Yamaha dealer.

7 When the message “Completed” appears, and the 02R96 has rebooted itself successfully, the upgrade is complete and you can quit the upgrade program.

Now you must initialize the 02R96.

- 8 **While holding down the 02R96's SCENE MEMORY [STORE] button, turn on the 02R96. When the confirmation message appears, release the [STORE] button, select "YES," and press [ENTER].**

The display returns to normal when initialization is complete.

<i>Note: Do not turn off the 02R96 while initialization is in progress, and do not touch the faders, as they may not calibrate correctly.</i>

- 9 **Use the 02R96's DISPLAY ACCESS [UTILITY] button to select the Battery Check page, and check the system software's version number.**

This completes the upgrade procedure.

Error Messages

Note: If the same error message appears each time you try to upgrade, the 02R96 may need repairing, in which case you should contact your Yamaha dealer.

02R96 Error Messages

"Vendor Error"

"Check Sum Error"

"Model ID Error"

Issue: These error messages indicate that the upgrade program is not working properly, or that another program is using the USB-MIDI driver.

Solution: Quit all programs, make sure that the upgrade program is okay, then try upgrading again.

PC Error Messages

"YAMAHA USB Driver not found!!"

Issue: The USB-MIDI driver was not found during startup.

Solution: Make sure the USB-MIDI driver is installed correctly, the USB cable is connected correctly, and the 02R96 is in download mode.

"Not enough memory! try closing some applications"

Issue: The PC does not have enough memory.

Solution: Quit all programs except for the upgrade program, then try upgrading again.

"File not found!!"

Issue: The upgrade data file could not be found.

Solution: Check the upgrade data file, then try upgrading again.

"File read error!!"

Issue: The upgrade data file could not be read.

Solution: Check the data file, then try upgrading again.

"File format error!!"

Issue: The format of the upgrade data file is incorrect.

Solution: Check the data file, then try upgrading again.

"Device open failed!!"

Issue: Connection to the USB-MIDI driver failed.

Solution: Make sure the USB-MIDI driver is installed correctly, the USB cable is connected correctly, and the 02R96 is in download mode.

"Uninstall failed!!"

Issue: Software uninstallation failed.

Solution: Check the USB cable, then try upgrading again.

"Install failed!!"

Issue: Software installation failed.

Solution: Check the USB cable, then try upgrading again.